



THE WATCH  
**Watch**

# Owner's Manual

# Quick Setup Guide

- Insert the SIM card into the watch. The SIM slot is behind the rubber cover labelled SIM CARD on the left of the watch.  
Use a fingernail or other small item to prise open the rubber cover.




**Tip:** We recommend you use a Vodafone SIM card.  
SIM cards from other networks might not work!

- Charge the watch's battery. The micro-usb port is behind the rubber cover on the right of the watch.
- Turn on the watch. The power button is the large button on the right of the watch marked with SOS and the power symbol.




# SE Tracker setup

- Install SE Tracker on your phone from the App Store. It's available for free for Android and iOS.

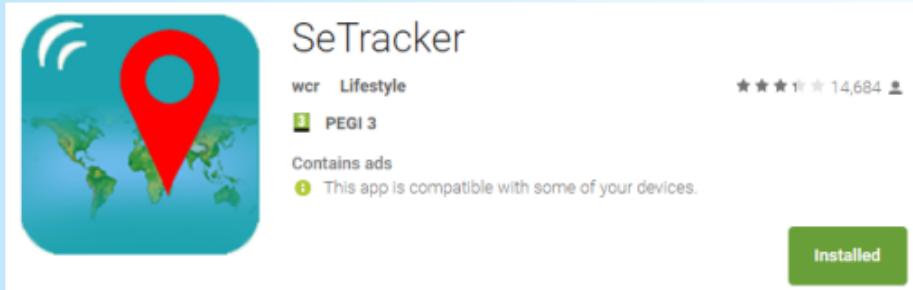

- Once installed, tap the Register button.

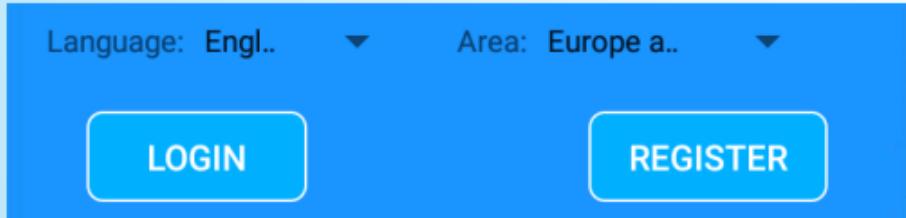

**Tip:** When adding more than one device, please note that every phone that has access to the app must use the same log in and password, i.e. if one parent has the app and Watch already logged in, the other parent will have to sign in using the same log in and password.

## Registration Form

All fields are mandatory

- **Watch ID**

You can manually type in the watch's ID, or you can click the  symbol to open a QR code scanner and scan the code on the watch.

- **Account**

Enter your email address.

- **Nickname**

This is the name which will be applied to the watch. It is recommended to set this to the name of the child who will be wearing the watch. The nickname is used to identify the watch in the app.

- **Password**

Please choose a secure password to prevent others from signing in.

- **Area**

Set your region to Europe and Africa. This determines which server the watch will communicate with.

# Features





## GPS Real-time Positioning

Your watch allows you to locate the device in real-time through the SeTracker app.

### How to locate the watch

Open the SeTracker app and login.

Once you're successfully signed in,  
press the large Map button in the top  
right of the app's home screen.



This opens a map with a marker showing the last known location of the watch, along with its battery life.

**Tip:** When setting the watch up, please note that GPS will only work when the watch is outdoors. When setting up, please give a few minutes for GPS to work outside.

## Configuration

To configure how often the watch sends its location, tap **Settings** on the home screen and press **Location Update Schedule**.

You can set the watch to send its location every 1 minute (Follow Mode), every 10 minutes (Normal Mode) or every hour (Power Save Mode).

**Note:** The recommended setting is Normal Mode (Update once every 10 minutes). Setting it to Follow Mode (Update once a minute) is more accurate, but will decrease battery life and increase bandwidth usage on the watch's SIM card.



## SOS Phone Call Alert

Your watch can make and receive phone calls to pre-approved numbers. In an emergency situation, pressing and holding the SOS button on the side of the watch for three seconds will make the watch dial the pre-approved numbers one at a time until one of them answers.

### Triggering an SOS Phone call

To make the watch dial the emergency numbers, press and hold the SOS/Power button on the right-hand side of the watch for three seconds.

# Configuration

To add or edit the emergency contact numbers, tap **Settings** on the home screen and press **SOS Numbers**.

From here, you can add up to three different emergency contact numbers. The watch will dial each of the three numbers in the order they appear in the list, and will call each entry one at a time until one of them answers.





## Removal Alarm

Once the wearer puts on the watch, a sensor kicks in and starts monitoring the wearer. When the watch is removed, the sensor issues an alert informing the app that the watch has been removed.

## Configuration

To toggle whether or not to receive an alert when the watch is removed, tap **Settings** on the home screen and press **Watch Removal Alert**.



## Touchscreen Display

The watches have a high resolution touchscreen display, allowing familiar gestures such as swiping and tapping. In fact, the watch only has one physical button, the emergency SOS button on the right-hand side.



## Geofence Safe Area


The app allows you to specify an area, centred on the watch's current location, which the watch and wearer are permitted to be. If the watch travels outside this area, the app will issue an alarm stating that the watch has left the area.

## Configuration

To add a geofence, press the Geofence button on the SeTracker home screen.

This will open a map centred around the watch's last reported position. From here, tap the + symbol at the bottom of the screen.

On the map screen, tap where you would like the centre of the geofence to be. Give it a name, and adjust how large you would like the geofence to be (minimum 200 metres), then press Save.

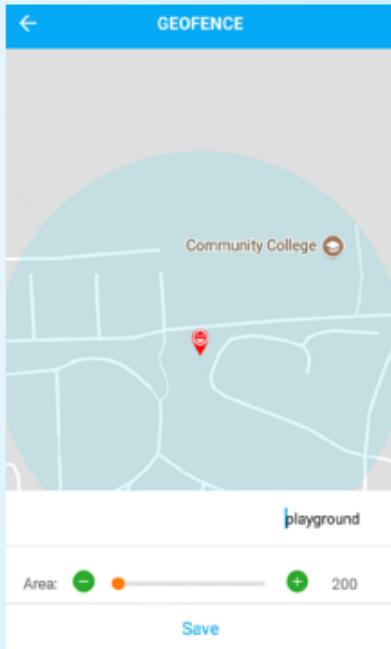



## Voice Monitoring

In an emergency situation, the watch allows you to activate its microphone and listen in to what is happening around it.

### To activate

On the app's home screen, press **Settings**. On the settings page, press **Sound Guardian**. The app will then ask you for a phone number. Type in a phone number and press Save. Once the watch receives the command, it will make a voice call (in the background) to the number specified.



## Fitness Tracker

The watch is capable of tracking health-related statistics such as number of steps taken, calories burned etc.

### Configuration

On the app's home screen, press **Health**. To activate statistic tracking, press on one of the four categories, enter the child's settings, and enable **Switch**. The watch will then begin tracking and reporting on that statistic.



## Two-Way Voice Calling

The watch is capable of acting just like a mobile phone, making and receiving voice calls from pre-approved numbers.


## Configuration

The watch will only accept phone calls from numbers which have been added through the SeTracker app. To add numbers, press **Settings** on the app's home screen, then press  Phone Book.

You can add up to 5 phone numbers to the watch's phone book.

## Making a call from the watch

From the watch's home screen, swipe to the left until you see the Phone book page, then tap it.

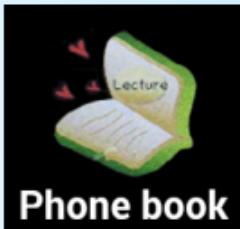

Once you are in the phone book, you can swipe through the entries then tap the contact you wish to call. The watch will dial the number as if it were a phone.

**Tip:** Did you know your child can add his/her friends' watches into their watch's phonebook and they can voice call each other



## SMS Messaging

The watch is capable of receiving and displaying text or voice messages from the app.


### Sending messages to the watch

From the app home screen, press the **Chat** icon.

This will show you a history of all messages sent to and from the watch.

## Changing between voice and text

To toggle between message types, tap the  button in the bottom left. This allows you to either type a new message to send as text, or press and hold the Start Recording button to send a voice message.

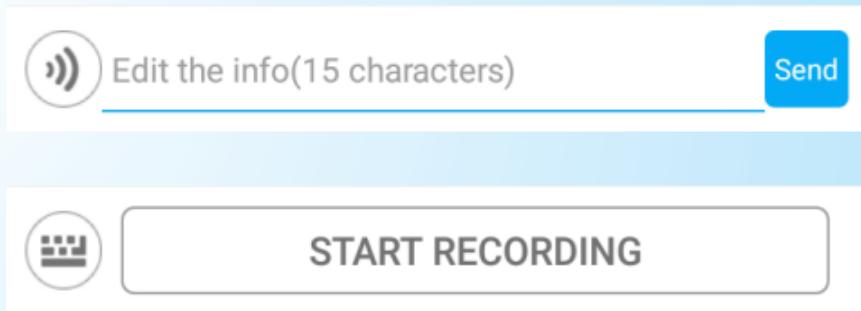

# App Settings

The app allows you to configure the watch's settings, as well as to locate the watch and its wearer in real-time.

## Settings

Press the settings button to configure the watch and set various preferences

- **SOS Numbers**

Press this option to add up to three emergency contact numbers to the watch. When the SOS button on the side of the watch is pressed and held for three seconds, the watch will make an emergency phone call to the numbers in order.

- **Sound Guardian**

Entering a phone number here will make the watch make a stealth voice call to the number specified.

- **Location Update Schedule**

Press this button to change how often the watch reports its location. **Note:** More frequent updates affects battery life. The recommended setting is once every 10 minutes.

- **Do Not Disturb**

Press this to enter time periods when the watch will be silent and will not play any alerts.

- **Contextual Model**

Press this to change the notification settings for the watch.

- **SMS Alerts**

Set a phone number which will receive text alerts from the watch on various events.

- **Phone Book**

Use this to add up to 5 different phone numbers to the watch's phone book. Any numbers entered here can be called directly from the watch's Phone Book page.

- **Language and Time Zone**

Set the app's language and time zone. The default language is English.

- **Watch Removal Alert**

This setting allows you to tell the watch whether or not to send an alert if the watch is removed from the wearer's wrist.